

Mystery Mao



95892_V17_EN

INSTRUCTIONS FOR USE

MYSTERY MAO



Made in China

Batteries



IMC. TOYS, S.A. • Pare Llaurador, 172 • 08224 Terrassa (Barcelona) SPAIN
Tel. 0034 937 888 992 • Fax 0034 937 332 833 • www.imctoys.com

After Sales Service
e-mail: sat@imc.es

ITEM 95892IM3GB • EAN: 8421134098992 • 110618

INSTRUCTIONS FOR USE

PRODUCT FEATURES

Mystery Mao looks like a normal cat, but if you bewitch him* with the magic wand included in the product, when you say the magic spell he can speak and guess the sport, animal or item of clothing you're thinking of!

*See the PLAYING GUIDE included in the product.

USE AND OPERATING INSTRUCTIONS

IMC TOYS products undergo strict production controls to guarantee the enjoyment and safety of your children. They are easy to use and operate. We are certain that they will provide your children with great entertainment. Thank you for purchasing one of our products. To consult our extensive product catalogue, please visit our web page at www.imctoys.com.

OPERATION WITH BATTERIES

IMPORTANT INFORMATION NOTE FOR ADULTS

Before giving the product to children, first remove all plastic, wires and any other object designed to fasten it during transport.

This product comes factory-prepared for the "TRY ME" function. The batteries that it includes are designed for this use. Therefore, it is possible that they may be spent. If this is the case, we recommend they should be replaced.

The product is distributed in its original packaging and for demonstration purposes in stores with the selector switch in the TRY-ME position (see fig. 1). The product has limited functionality in this position and will not respond to any voice commands. Turn the switch to the ON position for normal operation.

Replacing and installing the batteries

This product requires 4 LR6 (AA) 1.5V alkaline batteries (included). Firstly, open the velcro closure and set the switch (A) to the OFF position (see fig. 1). Remove the safety screw from the lid of the battery compartment located at the bottom of the base (see fig. 2). Remove the dead batteries. Notice the correct placement of the batteries in the image (see fig. 2) and place them according to the position and polarity indicated. Replace the lid and the safety screw (for your children's safety) and finally close the velcro closure.

Warning! Replacing or handling the battery should always be done under the supervision of an adult.

Operation*

*See the PLAYING GUIDE included in the product.

Energy-saving mode

If Mystery Mao doesn't receive any interaction he performs various actions to attract attention. After about 2 minutes without any interaction he will go into energy-saving mode. To activate him again, press any of the buttons indicated in the PLAYING GUIDE (a,b,c,d).

Advice for proper use

Troubleshooting:

If Mystery Mao does not respond, the sounds are reduced in volume or his movements become erratic, it is a sign that the batteries are wearing out and need to be replaced.

If you want to change the time, you will need to restart Mystery Mao and access bewitched

mode again. To do this, take the batteries out and then put them back in. Bear in mind that once you have restarted him and accessed bewitched mode, he will give you all the playing instructions again as if you were playing with him for the first time.

MAINTENANCE

Cleaning: Only wash the surface of the product by hand. Remember that there are mechanisms and electronic circuits inside it which could be damaged when in contact with water. Use a cloth slightly dampened with water or dry foam, if necessary, and then dry immediately with a dry cloth or leave it to dry indoors, without exposing to sunlight or direct heat sources. Do not use detergents or solvents.

Do not use it until it is completely dry. If the equipment becomes wet, turn it off and remove the batteries immediately. Dry the battery compartment with a dry cloth. Leave the battery compartment open until it is completely dry. If you wish, use a hairdryer to speed this process up. Do not try to use the unit until it is completely dry.

RECOMMENDATIONS FOR RESPONSIBLE USE AND FOR PROTECTING THE ENVIRONMENT

Put all the transport packaging, cardboard, plastic, etc. in the recycling containers in your neighbourhood.

Use rechargeable batteries whenever possible. Remember to turn off the toy if you have finished playing with it and take out the batteries if you are not going to be using it again for a long time.

If you no longer want the toy and it still works, do not throw it away. Remember that other people can still enjoy it, and find bodies or associations that can give it to them.

At the end of the life span of this product, it must not be disposed of as normal household rubbish. It should be delivered to a collection point for recycling electrical and electronic devices. Consult the symbol on the product, in the user manual or on the packaging for more information.

The materials are recyclable in accordance with their markings. If you recycle materials or find ways to reuse old devices, you make a considerable contribution to protecting the environment.

Please consult the nearest recycling centre or local authorities.

WARNINGS!

- Warning. Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.
- Please keep the packaging for future reference as it contains very important information.
- Please note that due to technical improvements this product may differ from the one that appears in the illustration.
- This product requires 4 type LR6 (AA) 1.5V batteries (included).
- This product is distributed with 4, LR6 (AA) 1.5V batteries for the "TRY ME" function. For normal operation of the product, it may be necessary to replace the batteries.
- The batteries or accumulators must be inserted according to the polarity indicated in the illustration.
- Used batteries or accumulators must be removed from the toy; failure to do so could cause damage.
- Do not mix old batteries with new ones.
- Do not mix different types of batteries.
- Use only those batteries recommended by the manufacturer or equivalents.
- Non-rechargeable batteries must not be recharged.
- The battery terminals must not be bridged or shorted.
- Changing or handling the batteries must always be carried out under the supervision of an adult.
- Remove the batteries from the compartment if the unit is not going to be used for a long period of time.
- Please respect the environment and deposit used batteries in the containers provided.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- This product achieves better performance using alkaline batteries.
- Read the instructions before use, follow them and keep them for reference.
- Under the environment with radio frequency interference, the sample may malfunction and will be resumed to normal after removal of the interference.
- Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.
- Under the environment with Fast Transient, the sample may malfunction and require user to reset the sample.
- Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).

.....
If you have a claim, please contact the authorised distributor.